



Belmont Luminar Water Feature Kit Instructions

The Belmont Luminar water feature is available in two sizes, 30cm or 40cm ball. The kit can be used recessed into a flower bed or incorporated into a patio as the stone plinth top has a standard 600mm dimension.

Belmont Luminar Water Feature Kit

The kit contains: reservoir - 40cm diameter x 40cm high, central support pipe, Luminar light, pump 800 litres per hour with 10m of cable, plug, 20mm water pipe, stone plinth 60 x 60cm with hole & the stone ball. Check the kit before installation.

The Belmont can be installed above ground (with a brick surround) or below ground as per our diagrams. There are some important details that need to be followed. Please read all the instructions carefully before installation. If you are unsure of any of the details please contact your local stockist or call the Foras team for further help or assistance.



1: Having installed the Belmont reservoir into the ground, follow our step by step guide for installation.




2: Push the support pipe onto the connection in the base of the reservoir (ensure the hole in the side of the support pipe is at the bottom). Make sure that this is fully inserted by pushing down firmly. See Pictures 1 and 2.




Cont:-

3: Feed the pump cable down through the support pipe. See Picture 3. Then feed it out the side cable hole at the bottom of the support pipe then up and over the lip of the reservoir. This should then lay in the cable cut out on the rim of the reservoir (the wire can then be fed through an underground pipe that leads from the feature to a power source). Attach the 20mm water pipe to the outlet on the pump, then place the pump and pipe down into the support pipe. See Picture 4. (See Diagram A)

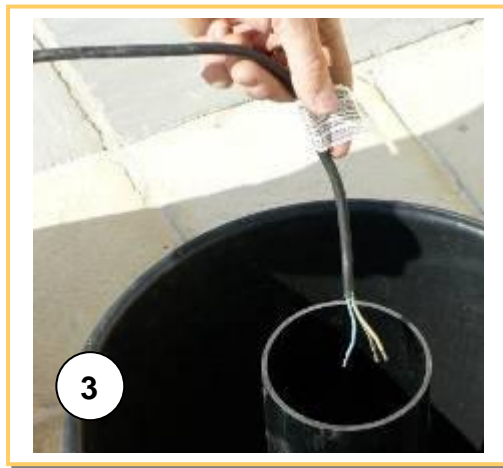

A

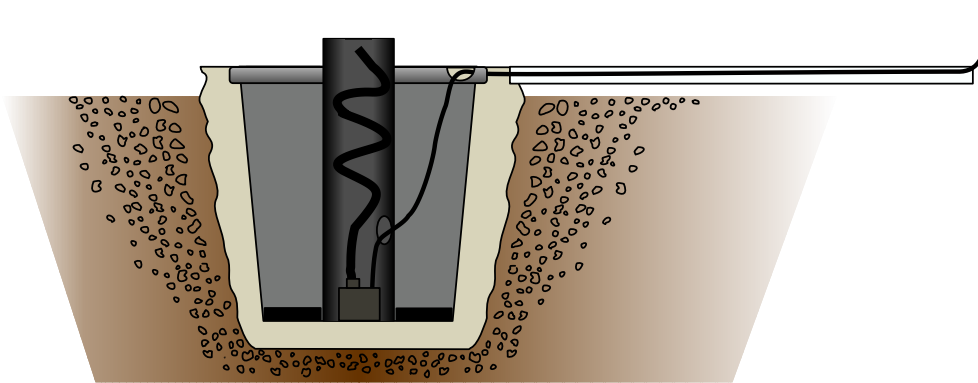

Note.
Ensure the ball is the right way up with the 30mm recess hole at the top, see Diagram B and Picture B1.

4: Feed the Luminar plug and cable through the hole in the top of the ball, allowing the nozzle to be a few inches away from the hole (**See Note**). Feed the plug and cable through the plinth hole and down through the support pipe, through the side cable out hole on the side of the support pipe. Pass the cable up and over the lip of the reservoir which should then lay in the cable cut out on the rim (this can then be fed through an underground pipe that leads from the feature to a power source) if installed. (See Diagram B).

B

Luminar cable feed through ball.

Luminar cable feed through plinth.

Luminar cable feed down pipe.

Luminar cable feed under paving or through pipe to power point

Luminar cable feed through support side cable hole.


Picture B1. Ball top



Cont:-

5: Place the stone plinth on top of the reservoir (**this must sit flat on top of the reservoir**) then move the ball closer (**See note**) to the support pipe. Pull the 20mm water pipe up from the support pipe and push it up through the ball and connect to the luminar nozzle. See Picture 5. See Diagram C.

Note.
When moving ball on and off support pipe ensure stone plinth has padded protection. See Diagram C.

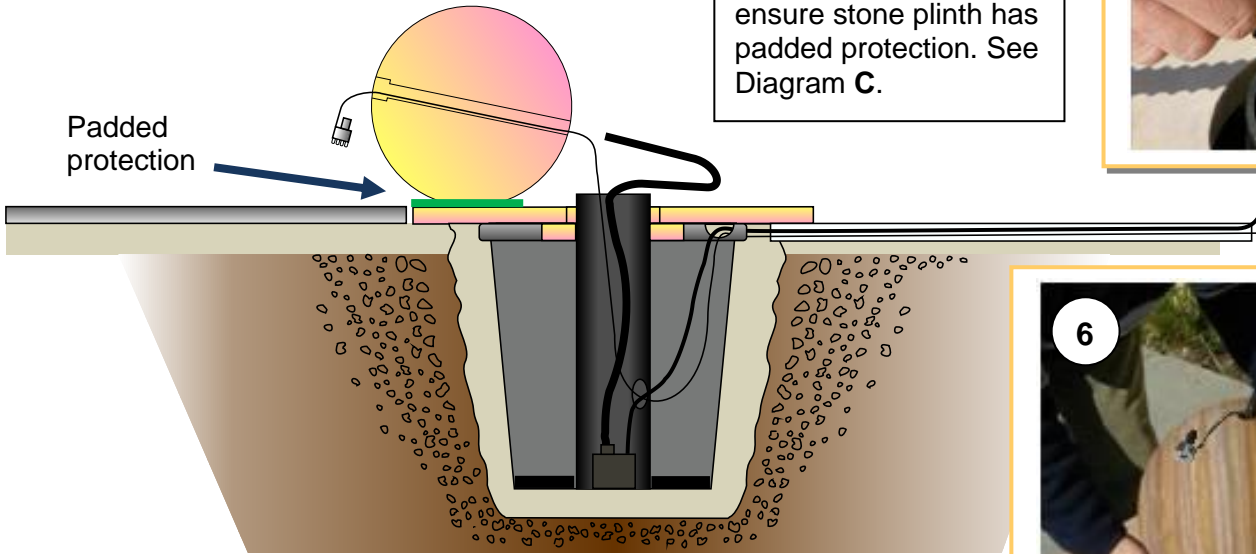


the 40cm ball) taking care not to nip the cables or pipe. See Picture 6.

Adjust the ball so the hole is in the middle this will allowing the water to flow evenly over the ball. Once the ball is in place push the luminar nozzle into the 30mm recess hole in the top of the stone ball. See picture 7 and diagram D.



7: Connect the wires to the plugs.

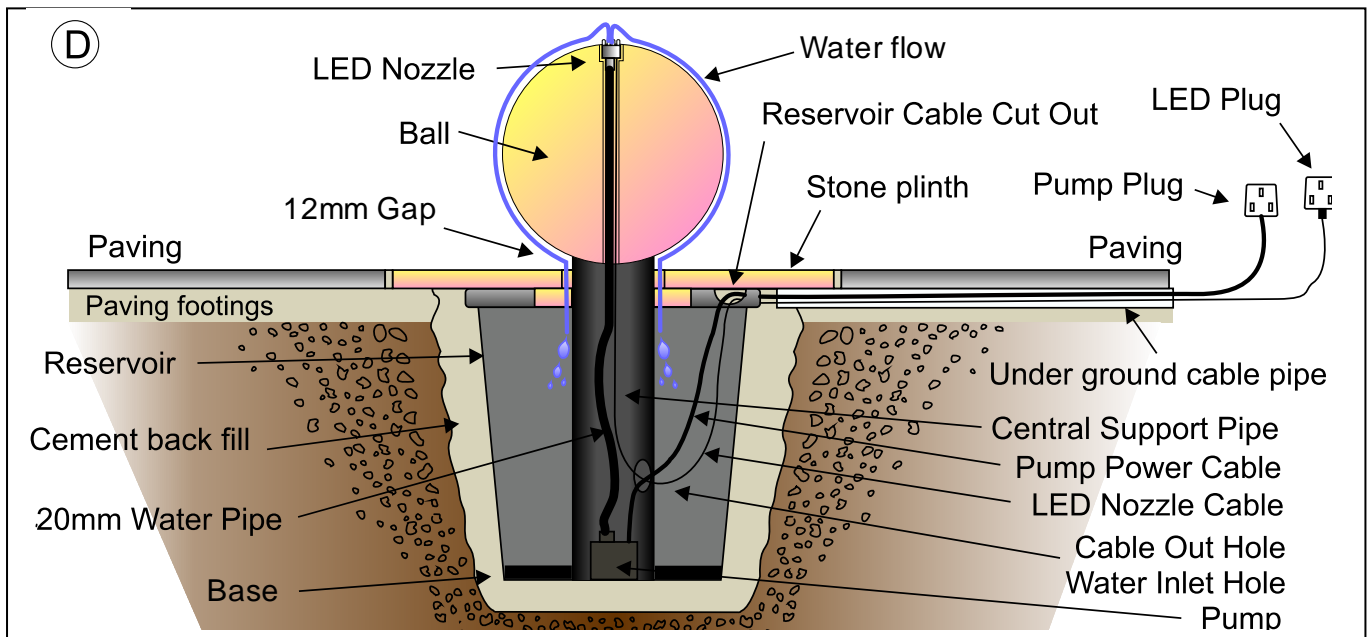

8: Fill the reservoir with water from the top of the ball allowing the water to flow around the ball into reservoir and switch on the pump. The pump can be adjusted to obtain the required flow rate by moving the ball off the support pipe, adjusting the pump and replacing it back down the support pipe; in a windy location reducing the flow rate will avoid the water blowing off the ball.

Cont:-

Important Notes:-
Side cable holes in the support pipe must be at bottom

Plinth must sit flat on rim of reservoir

There must be a gap of at least 12mm between ball and plinth for water to flow through

Pad out area on plinth when removing ball from support pipe to protect plinth

WARNING!

Belmont balls are heavy. Take extra care when moving them

Take care not to nip cable or water pipe when placing ball on support ring


Cont:-

During the winter the pump should be switched off and placed in an old cloth to protect from frost in and then into an insulated bag. It should then be returned into the support pipe and the ball replaced ready for an easy start in the spring. For full details contact the Foras team direct or visit our web site.

Foras cleaning kits are available to help prevent algae build up, and to keep the stone and water clean.



Installation Diagram

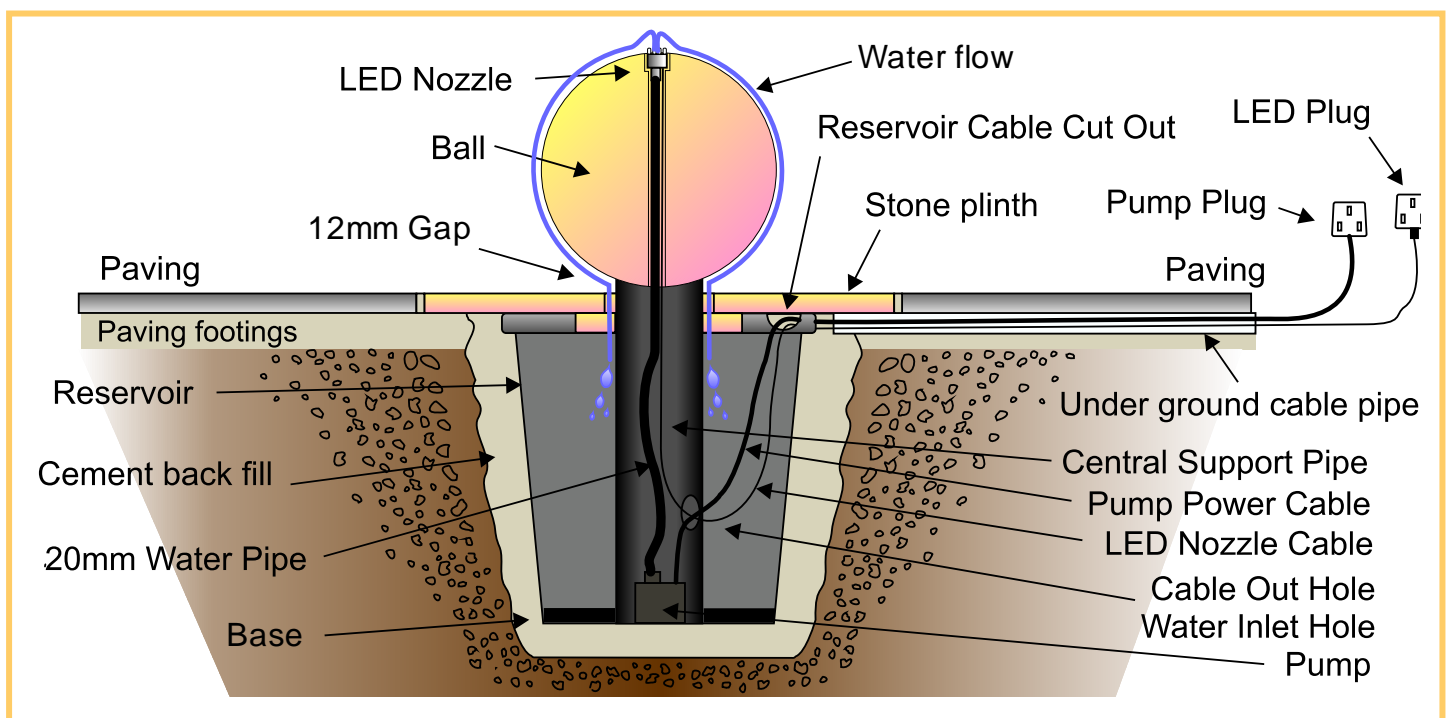

Foras, West Head Farm, Stowbridge, Kings Lynn, Norfolk, PE34 3NJ

www.foras.co.uk

email: sales@foras.co.uk

For further help and support on Foras products call our office on 01366 381069